

UA 77.100.5.v.2.00

Setup guide

refer to LDU pin numbers

Gnd	0		10	Rx(LDU) --> Tx (PC pin3)
+Exc	1		11	Gnd --> Gnd (PC pin5)
+Sen	2		12	Gnd
+Inp	3		13	Tx(LDU) --> Rx (PC pin2)
-Inp	4		14	
-Sen	5		15	
-Exc	6		16	
Gnd	7		17	
NC	8		18	+12v
NC	9		19	Gnd

